


locking spring assembly instructions

# abstracta<sup>®</sup> modular display system

design poul cadovius

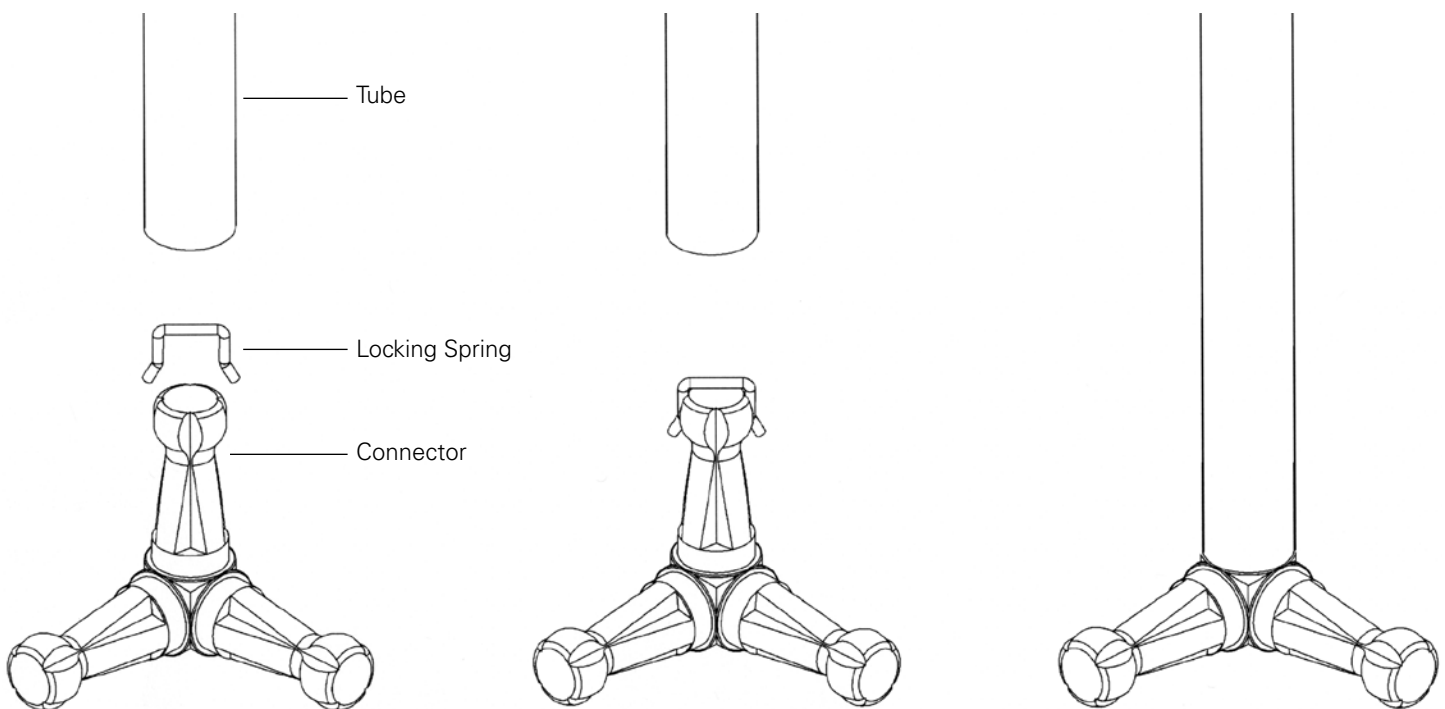

1. Place locking spring into the grooves on the head of the connector.

2. Align tube over head. Hold tube firmly against spring.

3. Hammer tube onto the head using a soft-faced hammer.

**Consort Display Group**  
2129 Portage Street  
Kalamazoo, MI 49001

**web:** [www.abstracta.com](http://www.abstracta.com)  
**or:** [www.consort.com](http://www.consort.com)  
**email:** [info@abstracta.com](mailto:info@abstracta.com)

**abstracta<sup>®</sup>** modular display system  
design poul cadovius  
**phone:** 800.223.7315  
269.388.4532  
**fax:** 269.344.4696